



# Command Matrix

## Trimble Business Center v5.70 Software

### Editions

Each Trimble® Business Center (TBC) Edition is designed to support a set of related workflows:

- **Viewer (Unlicensed):**  
Import + review field data, view projects, + export to Trimble field devices + software.
- **Field Data Edition:**  
Export third-party field data, perform basic CAD functions, complete data quality control, + work with level data.
- **Surface Modeling Edition:**  
Basic point cloud management, create + edit surfaces + alignments, cut/fill maps, + earthwork reports.
- **Survey Intermediate Edition:**  
GNSS post-processing, network + traverse adjustments, site calibrations; work with background images, labels, + dimensions.
- **Survey Advanced Edition:**  
Work with Trimble VISION™ data, create plan sets, process cadastral data, leverage full COGO + corridor routines.
- **Site Modeling Edition:**  
Convert + elevate 2D geometry into 3D for field operations; cleanup project data.
- **Site Construction Edition:**  
Compute site mass haul + site takeoff computations, linear quantities, layer depths, + material volumes.
- **Infrastructure Construction Edition:**  
Parametric intersection, interchange, + ramp designs with corridor mass haul quantities + volumes.



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
3D Preset Views	x	x	x	x	x	x	x	x
3D View Projection (Perspective vs. Ortho)	x	x	x	x	x	x	x	x
3D View Settings	x	x	x	x	x	x	x	x
About Trimble Business Center	x	x	x	x	x	x	x	x
Access Services	x	x	x	x	x	x	x	x
Accuracy Verification Test Reports	x	x	x	x	x	x	x	x
Add External Job Site Design	x	x	x	x	x	x	x	x
Archive Project	x	x	x	x	x	x	x	x
Back	x	x	x	x	x	x	x	x
Backward Planar View (Backward Camera View)	x	x	x	x	x	x	x	x
Bottom	x	x	x	x	x	x	x	x
Bring Forward	x	x	x	x	x	x	x	x
Bring to Front	x	x	x	x	x	x	x	x
Browse For Import File	x	x	x	x	x	x	x	x
CAD Command Line	x	x	x	x	x	x	x	x
Calibrate Laser Scanners	x	x	x	x	x	x	x	x
Center	x	x	x	x	x	x	x	x
Check for Updates	x	x	x	x	x	x	x	x
Cleanup Mobile Mapping Mission	x	x	x	x	x	x	x	x
Close Project	x	x	x	x	x	x	x	x
Colorize Scans	x	x	x	x	x	x	x	x
Command Pane	x	x	x	x	x	x	x	x
Compress/Email Field Data	x	x	x	x	x	x	x	x
Compute Project	x	x	x	x	x	x	x	x
Connected Community HCE	x	x	x	x	x	x	x	x
Controller Manager	x	x	x	x	x	x	x	x
Convert CSV to FXL	x	x	x	x	x	x	x	x
Convert to RINEX	x	x	x	x	x	x	x	x
Coordinate Scroll	x	x	x	x	x	x	x	x
Coordinate System Manager	x	x	x	x	x	x	x	x
Copy Field Data to Data Card	x	x	x	x	x	x	x	x
Copy Field Data to USB Flash Drive	x	x	x	x	x	x	x	x
Copy Project Library to USB Flash Drive	x	x	x	x	x	x	x	x
Copy Work Order	x	x	x	x	x	x	x	x
Crack Display Settings	x	x	x	x	x	x	x	x
Create Job Site Design	x	x	x	x	x	x	x	x
Create WorksManager Design	x	x	x	x	x	x	x	x
Create WorksOS Project	x	x	x	x	x	x	x	x
Create Work Order	x	x	x	x	x	x	x	x
Cutting Plane View	x	x	x	x	x	x	x	x
Debug Selection	x	x	x	x	x	x	x	x
Define Command Shortcuts	x	x	x	x	x	x	x	x
Defined Views	x	x	x	x	x	x	x	x



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
Delete	x	x	x	x	x	x	x	x
Delete Work Order	x	x	x	x	x	x	x	x
Device Pane	x	x	x	x	x	x	x	x
Edit Limit Box	x	x	x	x	x	x	x	x
eLearning	x	x	x	x	x	x	x	x
End-User License Agreement	x	x	x	x	x	x	x	x
Exit	x	x	x	x	x	x	x	x
Explore Object	x	x	x	x	x	x	x	x
Export .12da 12D Format Files (Basic)	x	x	x	x	x	x	x	x
Export DC Road Format From Corridor	x	x	x	x	x	x	x	x
Export DC Road Format From Surface	x	x	x	x	x	x	x	x
Export DWG	x	x	x	x	x	x	x	x
Export DXF	x	x	x	x	x	x	x	x
Export Field Data (Trimble Machine Control)	x	x	x	x	x	x	x	x
Export GCS900 Excavator Profile Files	x	x	x	x	x	x	x	x
Export GCS900 Machine Avoidance Zone File	x	x	x	x	x	x	x	x
Export GCS900 Machine Jobsite Design	x	x	x	x	x	x	x	x
Export GCS900 Machine Site Map	x	x	x	x	x	x	x	x
Export Measure Codes Definition File (MCD)	x	x	x	x	x	x	x	x
Export Project Link Exporter VCL File	x	x	x	x	x	x	x	x
Export SIMA Format	x	x	x	x	x	x	x	x
Export Sketchup .skp Files	x	x	x	x	x	x	x	x
Export Somero .nod Files	x	x	x	x	x	x	x	x
Export Survey Controller Job File	x	x	x	x	x	x	x	x
Export Survey Data Collector DC File	x	x	x	x	x	x	x	x
Export Survey Pro Job File	x	x	x	x	x	x	x	x
Export TDS Interlock (ij) File	x	x	x	x	x	x	x	x
<b>Export to Other CAD Applications</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>
Export Trimble Access job File	x	x	x	x	x	x	x	x
Export Trimble Access Road Strings	x	x	x	x	x	x	x	x
Export Trimble Access RXL Road Templates	x	x	x	x	x	x	x	x
Export Trimble Data Exchange Format (TDEF) File	x	x	x	x	x	x	x	x
Export Trimble JobXML Field Software Format	x	x	x	x	x	x	x	x
Feature Definition Manager	x	x	x	x	x	x	x	x
Filter Line Markings	x	x	x	x	x	x	x	x
Flags Pane	x	x	x	x	x	x	x	x
Float View	x	x	x	x	x	x	x	x
Front	x	x	x	x	x	x	x	x
Go To Run Position	x	x	x	x	x	x	x	x
Help	x	x	x	x	x	x	x	x
Imaging Config	x	x	x	x	x	x	x	x
Import	x	x	x	x	x	x	x	x



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
Import .12da File (Basic)	x	x	x	x	x	x	x	x
Import .asc ASCII, TDEF, Raw Data, InRoads Hz and Vt Alignment Files	x	x	x	x	x	x	x	x
Import .cal Site Calibration Files	x	x	x	x	x	x	x	x
Import .dat DiNi Level Files	x	x	x	x	x	x	x	x
Import .dat STAR*Net Level Files	x	x	x	x	x	x	x	x
Import .eje MDT Hz Alignment Files	x	x	x	x	x	x	x	x
Import .inf Fast Survey Files	x	x	x	x	x	x	x	x
Import .pbj Rangefinder Laser Files	x	x	x	x	x	x	x	x
Import .raw (TDS, Nikon) Raw Data Files	x	x	x	x	x	x	x	x
import .sp3, sp3c precise ephemeris files	x	x	x	x	x	x	x	x
Import .xyz point Cloud Files	x	x	x	x	x	x	x	x
Import .yxz Point Cloud Files	x	x	x	x	x	x	x	x
Import ASCII CSV Files - PNEZD	x	x	x	x	x	x	x	x
Import ASCII CSV Files - Station, Offset, Elevation	x	x	x	x	x	x	x	x
Import Ashtech ProMark / ProFlex .crd Format	x	x	x	x	x	x	x	x
Import Ashtech ProMark / ProFlex .ddd Format	x	x	x	x	x	x	x	x
Import Autodesk DWG Format	x	x	x	x	x	x	x	x
Import Autodesk DXF Format	x	x	x	x	x	x	x	x
Import Bentley .icm.dgn iModel Files	x	x	x	x	x	x	x	x
Import Bentley Microstation dgn files	x	x	x	x	x	x	x	x
Import Business Center - HCE .VCL Project Link Files	x	x	x	x	x	x	x	x
Import CaAiCE .txt Files	x	x	x	x	x	x	x	x
Import Cartomap .txt Files	x	x	x	x	x	x	x	x
Import CLIP .alz Alignment Files	x	x	x	x	x	x	x	x
Import CLIP .plt Alignment Files	x	x	x	x	x	x	x	x
Import CLIP .trv Files	x	x	x	x	x	x	x	x
Import e57 Format	x	x	x	x	x	x	x	x
Import Fast Survey .sys Files	x	x	x	x	x	x	x	x
Import Format Editor	x	x	x	x	x	x	x	x
Import GCS900 .avoid Format	x	x	x	x	x	x	x	x
Import GCS900 .avoid.svl Avoidance Zone Files	x	x	x	x	x	x	x	x
Import GCS900 .cfg Coordinate System Files	x	x	x	x	x	x	x	x
Import GCS900 .dsp Format	x	x	x	x	x	x	x	x
Import GCS900 .mch Format	x	x	x	x	x	x	x	x
Import GCS900 .mch Measure Up Files	x	x	x	x	x	x	x	x
Import GCS900 .persist Format	x	x	x	x	x	x	x	x
Import GCS900 .pro Format	x	x	x	x	x	x	x	x
Import GCS900 .svd Files	x	x	x	x	x	x	x	x
Import GCS900 .svd Format	x	x	x	x	x	x	x	x
Import GCS900 .svl Files	x	x	x	x	x	x	x	x
Import GCS900 .svl Format	x	x	x	x	x	x	x	x



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
Import GCS900 .tsd Format	x	x	x	x	x	x	x	x
Import Geopak .xsr Cross Section Report File	x	x	x	x	x	x	x	x
Import HYDROpro .hpt Files	x	x	x	x	x	x	x	x
Import IFC Files	x	x	x	x	x	x	x	x
Import Inframodel .xml Files	x	x	x	x	x	x	x	x
Import InRoads .soe Files	x	x	x	x	x	x	x	x
Import IREDES .xml Tunnel and Drill Plan Files	x	x	x	x	x	x	x	x
Import ISPOL .ali Alignment Files	x	x	x	x	x	x	x	x
Import ISPOL .ras Vertical Alignment Files	x	x	x	x	x	x	x	x
Import ISPOL .sce and .sc1 Files	x	x	x	x	x	x	x	x
Import LandXML Format	x	x	x	x	x	x	x	x
Import LAS/LAZ Format	x	x	x	x	x	x	x	x
Import Measure Codes Definition File (.MCD)	x	x	x	x	x	x	x	x
Import MDT .ras Vertical Alignment Files	x	x	x	x	x	x	x	x
Import MDT .tra Files	x	x	x	x	x	x	x	x
Import Monitoring Epochs	x	x	x	x	x	x	x	x
Import MX GENIO .crd, .mos, .txt Files	x	x	x	x	x	x	x	x
Import NGS .ds Data Sheet Files	x	x	x	x	x	x	x	x
Import NGS .htm Data Sheet Files	x	x	x	x	x	x	x	x
Import NGS OPUS .xml Files	x	x	x	x	x	x	x	x
Import Nikon Job File	x	x	x	x	x	x	x	x
Import Norway .KOF Files	x	x	x	x	x	x	x	x
Import Norway .tit Files	x	x	x	x	x	x	x	x
Import Novapoint .gen Files	x	x	x	x	x	x	x	x
Import Novapoint .vgp Files	x	x	x	x	x	x	x	x
Import PCS900 .persist Display Configuration Files	x	x	x	x	x	x	x	x
Import POD Format	x	x	x	x	x	x	x	x
Import PTS Format	x	x	x	x	x	x	x	x
Import PTX Format	x	x	x	x	x	x	x	x
Import RCP Format	x	x	x	x	x	x	x	x
Import REB .021 Files	x	x	x	x	x	x	x	x
Import REB .040 Files	x	x	x	x	x	x	x	x
Import REB .066 Files	x	x	x	x	x	x	x	x
Import REB .66 Files	x	x	x	x	x	x	x	x
Import Report	x	x	x	x	x	x	x	x
Import Report	x	x	x	x	x	x	x	x
Import SBG .geo Files	x	x	x	x	x	x	x	x
Import SBG .gt Files	x	x	x	x	x	x	x	x
Import SBG .lin Files	x	x	x	x	x	x	x	x
Import SBG .llc Files	x	x	x	x	x	x	x	x
Import SBG .lmd Files	x	x	x	x	x	x	x	x
Import SBG .nyl Files	x	x	x	x	x	x	x	x



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
Import SBG .prf Files	x	x	x	x	x	x	x	x
Import SBG .pxy Files	x	x	x	x	x	x	x	x
Import SBG .sec Files	x	x	x	x	x	x	x	x
Import SBG .skv Files	x	x	x	x	x	x	x	x
Import SCS900 .gcj Work Order Files	x	x	x	x	x	x	x	x
Import SCS900 .ini Site Settings File	x	x	x	x	x	x	x	x
Import SCS900 .spj Work Order Files	x	x	x	x	x	x	x	x
Import SCS900 .txt Work Order Results File	x	x	x	x	x	x	x	x
Import Sitepulse .epj Work Order Result Files	x	x	x	x	x	x	x	x
Import Sketchup .skp Files	x	x	x	x	x	x	x	x
Import Somero .nod Files	x	x	x	x	x	x	x	x
Import SQSI Format	x	x	x	x	x	x	x	x
Import Spectra Precision Field Surveyor .asc Format	x	x	x	x	x	x	x	x
Import Spectra Precision Field Surveyor .dat Format	x	x	x	x	x	x	x	x
Import Spectra Precision Field Surveyor .xml Format	x	x	x	x	x	x	x	x
Import Spectra Precision Field Surveyor ASCII Format	x	x	x	x	x	x	x	x
Import Spectra Precision Focus DL-15 Level Files	x	x	x	x	x	x	x	x
Import Survey Pro .job Format	x	x	x	x	x	x	x	x
Import Survey Pro .raw Format	x	x	x	x	x	x	x	x
Import Survey Pro .survey Format	x	x	x	x	x	x	x	x
Import Survey Pro .xml Format	x	x	x	x	x	x	x	x
Import TDS Interlock .ijj Format	x	x	x	x	x	x	x	x
Import Terramodel PRO Files	x	x	x	x	x	x	x	x
Import Trimble .dat GNSS Files	x	x	x	x	x	x	x	x
Import Trimble .dc Data Collector Files	x	x	x	x	x	x	x	x
Import Trimble .dc Site Calibration Files	x	x	x	x	x	x	x	x
Import Trimble .FXL Feature Code Library Files	x	x	x	x	x	x	x	x
Import Trimble .pav Paving Run Files	x	x	x	x	x	x	x	x
Import Trimble .RXL RoadXML Files	x	x	x	x	x	x	x	x
Import Trimble .tdx Data Exchange Files	x	x	x	x	x	x	x	x
Import Trimble .tsf Scanner Files	x	x	x	x	x	x	x	x
Import .TRB TrimBim Files	x	x	x	x	x	x	x	x
Import Trimble .ttm Surface Model Files	x	x	x	x	x	x	x	x
Import Trimble Access .dc Format	x	x	x	x	x	x	x	x
Import Trimble Access .job Format	x	x	x	x	x	x	x	x
Import Trimble Access .jxl Format	x	x	x	x	x	x	x	x
Import Trimble Access .rxl Format	x	x	x	x	x	x	x	x
Import Trimble Access .xml Format	x	x	x	x	x	x	x	x
Import Trimble Digital Fieldbook .dc Format	x	x	x	x	x	x	x	x
Import Trimble Digital Fieldbook .job Format	x	x	x	x	x	x	x	x



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
Import Trimble Digital Fieldbook .xml Format	x	x	x	x	x	x	x	x
Import Trimble GNSS .dat Format	x	x	x	x	x	x	x	x
Import Trimble GNSS .t00, .t01, .t02 Files	x	x	x	x	x	x	x	x
Import Trimble GNSS .t00/.t01/.t02 Format	x	x	x	x	x	x	x	x
Import Trimble Survey Controller .dc Format	x	x	x	x	x	x	x	x
Import Trimble Survey Controller .job Format	x	x	x	x	x	x	x	x
Import Trimble Survey Controller .jxl Format	x	x	x	x	x	x	x	x
Import Trimble Survey Controller .rxl Format	x	x	x	x	x	x	x	x
Import Trimble Survey Controller .xml Format	x	x	x	x	x	x	x	x
Import Trimble Survey Manager .jxl Format	x	x	x	x	x	x	x	x
Import Trimble Survey Manager ASCII Format	x	x	x	x	x	x	x	x
Import Trimble Survey Pro .survey files	x	x	x	x	x	x	x	x
Import Wirth .xyz Files	x	x	x	x	x	x	x	x
Import Work Order Results	x	x	x	x	x	x	x	x
Import/Export User Options	x	x	x	x	x	x	x	x
Invert Selection	x	x	x	x	x	x	x	x
Job Report Generator	x	x	x	x	x	x	x	x
Job Site Design Manager	x	x	x	x	x	x	x	x
Job Site Manager	x	x	x	x	x	x	x	x
Layer Group Manager	x	x	x	x	x	x	x	x
Layer Manager	x	x	x	x	x	x	x	x
Left	x	x	x	x	x	x	x	x
Left Mouse Pan	x	x	x	x	x	x	x	x
Left Mouse Rotate	x	x	x	x	x	x	x	x
Left Mouse Select	x	x	x	x	x	x	x	x
Left Mouse Zoom	x	x	x	x	x	x	x	x
License Manager	x	x	x	x	x	x	x	x
Material and Site Improvement Manager	x	x	x	x	x	x	x	x
Measure Angle	x	x	x	x	x	x	x	x
Measure Distance	x	x	x	x	x	x	x	x
<b>Measure Distance CSV Report</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>
Measure Point	x	x	x	x	x	x	x	x
Move to Next Tab Group	x	x	x	x	x	x	x	x
Move to Previous Tab Group	x	x	x	x	x	x	x	x
New 3D Drive View	x	x	x	x	x	x	x	x
New 3D View	x	x	x	x	x	x	x	x
New Cross-Section View	x	x	x	x	x	x	x	x
New Default Project	x	x	x	x	x	x	x	x
New Feature Library	x	x	x	x	x	x	x	x
New Horizontal Tab Group	x	x	x	x	x	x	x	x
New Oblique Camera View	x	x	x	x	x	x	x	x
New Plan View	x	x	x	x	x	x	x	x



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
New Plan View (old architecture)	x	x	x	x	x	x	x	x
New Profile View	x	x	x	x	x	x	x	x
New Project	x	x	x	x	x	x	x	x
New Station View	x	x	x	x	x	x	x	x
New Station View (referenced images)	x	x	x	x	x	x	x	x
New Vertical Tab Group	x	x	x	x	x	x	x	x
Office Synchronizer	x	x	x	x	x	x	x	x
Online GNSS Planning	x	x	x	x	x	x	x	x
Open Project	x	x	x	x	x	x	x	x
Open Remote File	x	x	x	x	x	x	x	x
Options	x	x	x	x	x	x	x	x
Orthographic	x	x	x	x	x	x	x	x
Pan	x	x	x	x	x	x	x	x
Pan Precise	x	x	x	x	x	x	x	x
Perspective	x	x	x	x	x	x	x	x
Plane Manager	x	x	x	x	x	x	x	x
Planning	x	x	x	x	x	x	x	x
Polygon Select	x	x	x	x	x	x	x	x
Presentation Mode	x	x	x	x	x	x	x	x
Process SCS work order symbols	x	x	x	x	x	x	x	x
Process View	x	x	x	x	x	x	x	x
Profile Viewer	x	x	x	x	x	x	x	x
Project Explorer	x	x	x	x	x	x	x	x
Project Settings	x	x	x	x	x	x	x	x
Properties	x	x	x	x	x	x	x	x
Publish Designs to WorksManager	x	x	x	x	x	x	x	x
Publish Field Data To Business Data Center	x	x	x	x	x	x	x	x
Publish Field Data to Project Library	x	x	x	x	x	x	x	x
Publish Library to USB	x	x	x	x	x	x	x	x
Publish to Clarity	x	x	x	x	x	x	x	x
Publish to WorksOS	x	x	x	x	x	x	x	x
Quadri Connector	x	x	x	x	x	x	x	x
Quality Assurance Report	x	x	x	x	x	x	x	x
Reassign External Job Site Design	x	x	x	x	x	x	x	x
Reassign Work Order	x	x	x	x	x	x	x	x
Rectangle Select	x	x	x	x	x	x	x	x
Redo	x	x	x	x	x	x	x	x
Region of Interest	x	x	x	x	x	x	x	x
Right	x	x	x	x	x	x	x	x
Run Last Command	x	x	x	x	x	x	x	x
Run View (Panoramic View)	x	x	x	x	x	x	x	x
Save As Clone	x	x	x	x	x	x	x	x
Save File Remotely	x	x	x	x	x	x	x	x





Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
Save Project	x	x	x	x	x	x	x	x
Save Project As	x	x	x	x	x	x	x	x
Save Project As Template	x	x	x	x	x	x	x	x
SCS Data Manager	x	x	x	x	x	x	x	x
Select All	x	x	x	x	x	x	x	x
Select by Layer	x	x	x	x	x	x	x	x
Select by Polygon	x	x	x	x	x	x	x	x
Select Points	x	x	x	x	x	x	x	x
Selection Explorer	x	x	x	x	x	x	x	x
Send Backward	x	x	x	x	x	x	x	x
Send to Back	x	x	x	x	x	x	x	x
Set Limit Box	x	x	x	x	x	x	x	x
Set Menu Layout	x	x	x	x	x	x	x	x
Side Planar View (Side Camera View)	x	x	x	x	x	x	x	x
SiteVision AR Exporter	x	x	x	x	x	x	x	x
Spectra Geospatial Origin Job File Exporter	x	x	x	x	x	x	x	x
Snap Mode	x	x	x	x	x	x	x	x
Start Page	x	x	x	x	x	x	x	x
Station View Image Filter	x	x	x	x	x	x	x	x
Stored Measurements Report	x	x	x	x	x	x	x	x
Surface Slicer View	x	x	x	x	x	x	x	x
Tile Sequence Viewer	x	x	x	x	x	x	x	x
Toggle Gridlines	x	x	x	x	x	x	x	x
Toggle Line Marking	x	x	x	x	x	x	x	x
Toggle Visibility	x	x	x	x	x	x	x	x
Toggle Z-Axis	x	x	x	x	x	x	x	x
Top	x	x	x	x	x	x	x	x
Tours and Tutorials	x	x	x	x	x	x	x	x
Trimble Access Services	x	x	x	x	x	x	x	x
Trimble Clarity	x	x	x	x	x	x	x	x
Trimble Sync	x	x	x	x	x	x	x	x
Trimble Sync Manager	x	x	x	x	x	x	x	x
Undo	x	x	x	x	x	x	x	x
User Profile Manager	x	x	x	x	x	x	x	x
View 3D Preset Last Used	x	x	x	x	x	x	x	x
View Filter Manager	x	x	x	x	x	x	x	x
View Mission Trajectory (Toggle Trajectory)	x	x	x	x	x	x	x	x
Walk-Through	x	x	x	x	x	x	x	x
WorksManager	x	x	x	x	x	x	x	x
WorksManager Design Manager	x	x	x	x	x	x	x	x
<b>WorksManager Design Status</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>
WorksManager Field Data to USB Drive	x	x	x	x	x	x	x	x



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
WorksManager Project	x	x	x	x	x	x	x	x
WorksManager Work Order	x	x	x	x	x	x	x	x
WorksOS	x	x	x	x	x	x	x	x
Work Order Editor	x	x	x	x	x	x	x	x
Work Order Report	x	x	x	x	x	x	x	x
Work Order Report	x	x	x	x	x	x	x	x
Work Orders Summary	x	x	x	x	x	x	x	x
Workflow Guides	x	x	x	x	x	x	x	x
Write FXL to CSV	x	x	x	x	x	x	x	x
Zoom	x	x	x	x	x	x	x	x
Zoom Extents	x	x	x	x	x	x	x	x
Zoom In	x	x	x	x	x	x	x	x
Zoom Out	x	x	x	x	x	x	x	x
Zoom Precise	x	x	x	x	x	x	x	x
Add/Remove Selection		x	x	x	x	x	x	x
Advanced Select		x	x	x	x	x	x	x
As Staked Corridor Report		x	x	x	x	x	x	x
As Staked Report		x	x	x	x	x	x	x
Batter Conformance Report		x	x	x	x	x	x	x
Break Line		x	x	x	x	x	x	x
Change Coordinate System		x	x	x	x	x	x	x
Clip Lines		x	x	x	x	x	x	x
Combine Level Files		x	x	x	x	x	x	x
Coordinate System Comparison Report		x	x	x	x	x	x	x
Copy Objects		x	x	x	x	x	x	x
Create Arc		x	x	x	x	x	x	x
Create Block		x	x	x	x	x	x	x
Create Boundary		x	x	x	x	x	x	x
Create Circle		x	x	x	x	x	x	x
Create Dependent Point		x	x	x	x	x	x	x
Create Linestring		x	x	x	x	x	x	x
Create Plotbox		x	x	x	x	x	x	x
Create Point		x	x	x	x	x	x	x
Create Polygon		x	x	x	x	x	x	x
Create Polyline		x	x	x	x	x	x	x
Create Rectangle		x	x	x	x	x	x	x
Create Text		x	x	x	x	x	x	x
Create Three Point Circle		x	x	x	x	x	x	x
Create Three Point Rectangle		x	x	x	x	x	x	x
Datum Gridding		x	x	x	x	x	x	x
Delete Line Segment		x	x	x	x	x	x	x
Detect Crossing Geometry		x	x	x	x	x	x	x



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
Disable Redundant Backsights		x	x	x	x	x	x	x
Divide Line		x	x	x	x	x	x	x
Edit		x	x	x	x	x	x	x
Edit Dependent Point		x	x	x	x	x	x	x
Edit Linestring		x	x	x	x	x	x	x
Edit Text		x	x	x	x	x	x	x
Explode		x	x	x	x	x	x	x
Explode Points		x	x	x	x	x	x	x
Export LAZ Point Clouds		x	x	x	x	x	x	x
Export Applanix Smartbase Format		x	x	x	x	x	x	x
Export BlueBook Format		x	x	x	x	x	x	x
Export Digital Fieldbook Job File		x	x	x	x	x	x	x
Export E57 Point Clouds		x	x	x	x	x	x	x
Export E57 Structured		x	x	x	x	x	x	x
Export ESRI Shapefile Format		x	x	x	x	x	x	x
Export Field Surveyor V2 Job File		x	x	x	x	x	x	x
Export Format Editor		x	x	x	x	x	x	x
Export Google KML/KMZ Format		x	x	x	x	x	x	x
Export IFC		x	x	x	x	x	x	x
Export Inframodel File		x	x	x	x	x	x	x
Export KOF Vector Data File		x	x	x	x	x	x	x
Export LandXML File		x	x	x	x	x	x	x
Export LAS Point Clouds		x	x	x	x	x	x	x
Export POD Point Clouds		x	x	x	x	x	x	x
Export PTS Point Clouds		x	x	x	x	x	x	x
Export PTX Point Clouds		x	x	x	x	x	x	x
Export RCP Point Clouds (Autodesk Recap)		x	x	x	x	x	x	x
Export RINEX Format		x	x	x	x	x	x	x
Export SDMS Format		x	x	x	x	x	x	x
Export SOSI Format		x	x	x	x	x	x	x
Export Trajectory CSV File		x	x	x	x	x	x	x
Export TTM File		x	x	x	x	x	x	x
External Processing Services		x	x	x	x	x	x	x
Feature Attributes Export		x	x	x	x	x	x	x
Feature Code Processing Report		x	x	x	x	x	x	x
Geodatabase XML Exporter		x	x	x	x	x	x	x
Geoid Sub-Gridding		x	x	x	x	x	x	x
Google Earth		x	x	x	x	x	x	x
Import Blocks		x	x	x	x	x	x	x
Insert Blocks		x	x	x	x	x	x	x
Import ESRI Shapefile Format		x	x	x	x	x	x	x
Inverse		x	x	x	x	x	x	x



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
Inverse Results Report		x	x	x	x	x	x	x
Join Lines		x	x	x	x	x	x	x
Level Editor		x	x	x	x	x	x	x
Level Report		x	x	x	x	x	x	x
Line Style Manager		x	x	x	x	x	x	x
Line Type Editor		x	x	x	x	x	x	x
Local Site Settings		x	x	x	x	x	x	x
Mean Angle Report		x	x	x	x	x	x	x
Mean Angle Residuals		x	x	x	x	x	x	x
Merge Points		x	x	x	x	x	x	x
Mirror Objects		x	x	x	x	x	x	x
Move Objects		x	x	x	x	x	x	x
Move Survey Point		x	x	x	x	x	x	x
Name Objects		x	x	x	x	x	x	x
New Feature Spreadsheet		x	x	x	x	x	x	x
New Layer		x	x	x	x	x	x	x
New Occupation Spreadsheet		x	x	x	x	x	x	x
New Optical Spreadsheet		x	x	x	x	x	x	x
New Points Spreadsheet		x	x	x	x	x	x	x
New Vector Spreadsheet		x	x	x	x	x	x	x
Offset Line		x	x	x	x	x	x	x
Page Setup		x	x	x	x	x	x	x
Pipeline Attributes		x	x	x	x	x	x	x
Point Comparison Report		x	x	x	x	x	x	x
Point Derivation Report		x	x	x	x	x	x	x
Point List Report		x	x	x	x	x	x	x
Point Symbol		x	x	x	x	x	x	x
Print		x	x	x	x	x	x	x
Print Preview		x	x	x	x	x	x	x
Process Feature Codes		x	x	x	x	x	x	x
Processing Services		x	x	x	x	x	x	x
Project Computation Report		x	x	x	x	x	x	x
Publish to TCC		x	x	x	x	x	x	x
Purge Blocks		x	x	x	x	x	x	x
Quality Assurance Report		x	x	x	x	x	x	x
Related Files		x	x	x	x	x	x	x
Relayer Objects		x	x	x	x	x	x	x
Rename Points		x	x	x	x	x	x	x
Renamed Point List Report		x	x	x	x	x	x	x
Report Options		x	x	x	x	x	x	x
Rotate Objects		x	x	x	x	x	x	x
Save As Site		x	x	x	x	x	x	x



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
Scale Objects		x	x	x	x	x	x	x
Select by Elevation Range		x	x	x	x	x	x	x
Select Duplicate Points		x	x	x	x	x	x	x
Select Observations		x	x	x	x	x	x	x
Select Points by Vector		x	x	x	x	x	x	x
Select Unprocessed Sessions		x	x	x	x	x	x	x
Site Calibration		x	x	x	x	x	x	x
Site Calibration Report		x	x	x	x	x	x	x
Start Data Service		x	x	x	x	x	x	x
Station Panorama Exporter		x	x	x	x	x	x	x
Symbol Editor		x	x	x	x	x	x	x
Symbol Manager		x	x	x	x	x	x	x
TDX Export		x	x	x	x	x	x	x
Text Style Manager		x	x	x	x	x	x	x
TopoDOT Export - Terrestrial Scan Data		x	x	x	x	x	x	x
Total Station Editor		x	x	x	x	x	x	x
Vector List Report		x	x	x	x	x	x	x
Write Features to GIS Report		x	x	x	x	x	x	x
X7 Export to TMX		x	x	x	x	x	x	x
Add Legend			x	x	x	x	x	x
Add Surface Texture			x	x	x	x	x	x
Add to Point Cloud Region			x	x	x	x	x	x
Add/Remove Surface Boundaries			x	x	x	x	x	x
Add/Remove Surface Members			x	x	x	x	x	x
Alignment Editor			x	x	x	x	x	x
Alignment Geometry Report			x	x	x	x	x	x
Append to Alignment			x	x	x	x	x	x
Append Tracked Line			x	x	x	x	x	x
AreaLengthCountReport			x	x	x	x	x	x
Average Points			x	x	x	x	x	x
Big Point Size			x	x	x	x	x	x
Blended Display			x	x	x	x	x	x
Change Elevation			x	x	x	x	x	x
Change Global to Local			x	x	x	x	x	x
Change Local to Global			x	x	x	x	x	x
Clip Selected			x	x	x	x	x	x
Clip Unselected			x	x	x	x	x	x
Color Regions By Elevation			x	x	x	x	x	x
Colorize Region			x	x	x	x	x	x
Convert As-Staked Point			x	x	x	x	x	x
Convert CAD Points			x	x	x	x	x	x
Convert Global to Local			x	x	x	x	x	x
Convert Local To Global			x	x	x	x	x	x



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
Copy Stored Cross-Section			X	X	X	X	X	X
Copy To Profile			X	X	X	X	X	X
Create Alignment			X	X	X	X	X	X
Create Alignment From a GENIO 6D String			X	X	X	X	X	X
Create Breakline			X	X	X	X	X	X
Create CAD Points from Scan Points (Scan to CAD)			X	X	X	X	X	X
Create Contour at Elevation			X	X	X	X	X	X
Create Contours			X	X	X	X	X	X
Create Cut/Fill Map			X	X	X	X	X	X
Create Hatch			X	X	X	X	X	X
Create Horizontal Alignment Label			X	X	X	X	X	X
Create Linestring from Points			X	X	X	X	X	X
Create Planar Surface			X	X	X	X	X	X
Create Point Cloud Region			X	X	X	X	X	X
Create Points at Intervals			X	X	X	X	X	X
Create Points from CAD			X	X	X	X	X	X
Create Profile Proxy			X	X	X	X	X	X
Create Quick Contour at Elevation			X	X	X	X	X	X
Create Quick Contours			X	X	X	X	X	X
Create Stored Cross-Section			X	X	X	X	X	X
Create Surface			X	X	X	X	X	X
Create Surface Cross-Section			X	X	X	X	X	X
Create Surface Edge Breakline			X	X	X	X	X	X
Create Surface Elevation Grid			X	X	X	X	X	X
Create Surface Intersection			X	X	X	X	X	X
Create Surface Intersection Lines			X	X	X	X	X	X
Create Surface Profile			X	X	X	X	X	X
Create Surface Tie			X	X	X	X	X	X
Create Volume Grid			X	X	X	X	X	X
Define Corridor Strata			X	X	X	X	X	X
Densify An Alignment Based Surface			X	X	X	X	X	X
Drape Objects On Surface			X	X	X	X	X	X
Earthwork Report			X	X	X	X	X	X
Edit Alignment Labels			X	X	X	X	X	X
Edit Color Mapping			X	X	X	X	X	X
<b>Edit Heatmap Colors (Finished Surface/Pavement Report )</b>			<b>X</b>	<b>X</b>	<b>X</b>	<b>X</b>	<b>X</b>	<b>X</b>
Export GVX File Format			X	X	X	X	X	X
Export RXL Road Format from Alignment			X	X	X	X	X	X
Export RXL Road Format From Surface			X	X	X	X	X	X
Extra Large Point Size			X	X	X	X	X	X
Fillet/Chamfer			X	X	X	X	X	X
Finished Pavement Report			X	X	X	X	X	X



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
Finished Surface Report			X	X	X	X	X	X
Flatten Surface			X	X	X	X	X	X
Geometry Report			X	X	X	X	X	X
Get All points			X	X	X	X	X	X
Get Unused Points			X	X	X	X	X	X
Keep In			X	X	X	X	X	X
Keep Out			X	X	X	X	X	X
Label Contours By Crossing			X	X	X	X	X	X
Large Point Size			X	X	X	X	X	X
Match Properties			X	X	X	X	X	X
Measure Volume			X	X	X	X	X	X
Medium Point Size			X	X	X	X	X	X
Merge Regions			X	X	X	X	X	X
Merge Surfaces			X	X	X	X	X	X
Move/Rotate/Scale Objects			X	X	X	X	X	X
Move/Rotate/Scale Objects by Points			X	X	X	X	X	X
MSI Report			X	X	X	X	X	X
Normal Shading			X	X	X	X	X	X
Number of loaded points (display Options)			X	X	X	X	X	X
Pavement Conformance Report			X	X	X	X	X	X
Point Cloud Rendering Settings			X	X	X	X	X	X
Points to Surface			X	X	X	X	X	X
Points to Surface Report			X	X	X	X	X	X
REB 21.003 Volume Report			X	X	X	X	X	X
REB 21.033 Linear Surface Areas Report			X	X	X	X	X	X
REB 22.013 Prismatic Volume Report			X	X	X	X	X	X
REB 23.003 Calculation Report			X	X	X	X	X	X
REB Tools			X	X	X	X	X	X
Rebuild Alignment Labels			X	X	X	X	X	X
Rebuild Contours			X	X	X	X	X	X
Rebuild Surface			X	X	X	X	X	X
Render Point Cloud Region			X	X	X	X	X	X
Render Point Cloud Region Using Color-Coded Intensity			X	X	X	X	X	X
Render Point Cloud Region Using Gray-Scale Intensity			X	X	X	X	X	X
Render Point Cloud Region Using Region Color			X	X	X	X	X	X
Render Point Cloud Region Using Scan Color			X	X	X	X	X	X
Render Point Cloud Regions Using Color by Elevation			X	X	X	X	X	X
Render Point Cloud Regions Using True Color			X	X	X	X	X	X
RenderByBlendedIntensity			X	X	X	X	X	X
Rendering Settings			X	X	X	X	X	X



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
RenderPointCloudSwitch			X	X	X	X	X	X
Restore All			X	X	X	X	X	X
Restore Region			X	X	X	X	X	X
Sample Point Cloud Regions			X	X	X	X	X	X
Sample Point Clouds			X	X	X	X	X	X
Select Similar			X	X	X	X	X	X
Set Line Elevation			X	X	X	X	X	X
Shrink 3D Faces			X	X	X	X	X	X
Small Point Size			X	X	X	X	X	X
Standardize Layers			X	X	X	X	X	X
Stored Cross-Section Editor			X	X	X	X	X	X
Surface Information Report			X	X	X	X	X	X
Swap Surface Triangles			X	X	X	X	X	X
Switch Point Size			X	X	X	X	X	X
Track Region Outline			X	X	X	X	X	X
Trim Surface Edge			X	X	X	X	X	X
Trim/Extend Lines			X	X	X	X	X	X
Trimble Access Roads Strings			X	X	X	X	X	X
Trimble Access Roads RXL Templates			X	X	X	X	X	X
Add/Remove Image Boundaries				X	X	X	X	X
Add Reference File				X	X	X	X	X
Adjust Network				X	X	X	X	X
Adjust Traverse				X	X	X	X	X
ALTA/NSPS Allowable Relative Tolerance Report				X	X	X	X	X
Baseline Processing Report				X	X	X	X	X
Capture 3D				X	X	X	X	X
Capture Image				X	X	X	X	X
Clear Adjustment Results				X	X	X	X	X
Clear Processing Results				X	X	X	X	X
Clear Site Calibration				X	X	X	X	X
Clear Traverse Adjustment Result				X	X	X	X	X
Copy View To Clipboard				X	X	X	X	X
Create Angular Dimensions				X	X	X	X	X
Create Custom Report				X	X	X	X	X
Create Leader Lines				X	X	X	X	X
Create Line Label Table				X	X	X	X	X
Create Linear Dimensions				X	X	X	X	X
Create Point Label Table				X	X	X	X	X
Create Polygon Label Table				X	X	X	X	X
Dimension Style Manager				X	X	X	X	X
Disable Baselines				X	X	X	X	X
Disable Sessions				X	X	X	X	X
Disable Trajectories				X	X	X	X	X





Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
Edit Custom Report				x	x	x	x	x
Edit Dimensions				x	x	x	x	x
Edit Label Table				x	x	x	x	x
Enable Baselines				x	x	x	x	x
Enable Sessions				x	x	x	x	x
Enable Trajectories				x	x	x	x	x
Find and Replace				x	x	x	x	x
Flip an Azimuth Bearing Label				x	x	x	x	x
Force Continuous				x	x	x	x	x
Georeference Image				x	x	x	x	x
Georeference Vector PDF				x	x	x	x	x
GNSS Loop Closure				x	x	x	x	x
GNSS Loop Closure Results Report				x	x	x	x	x
Import Vector PDF Data				x	x	x	x	x
Insert Image				x	x	x	x	x
Internet Download				x	x	x	x	x
Label Lines				x	x	x	x	x
Label Points				x	x	x	x	x
Label Polygons				x	x	x	x	x
Label Style Manager				x	x	x	x	x
Label Table Style Manager				x	x	x	x	x
Labelling Scale Factor				x	x	x	x	x
Map Objects				x	x	x	x	x
Network Adjustment Report				x	x	x	x	x
New Time-Based View				x	x	x	x	x
Pavement Conformance Report (Advanced)				x	x	x	x	x
Place Image				x	x	x	x	x
Process Baselines				x	x	x	x	x
Send to RTX-PP				x	x	x	x	x
Session Editor				x	x	x	x	x
Show Map				x	x	x	x	x
String Report				x	x	x	x	x
Swap Label Sides				x	x	x	x	x
Toggle Background Map				x	x	x	x	x
Traverse Adjustment Report				x	x	x	x	x
Best-Fit Line					x	x	x	x
Build Sheets					x	x	x	x
Camera Calibration					x	x	x	x
Camera Calibration Check Report					x	x	x	x
Combine Surfaces					x	x	x	x
Copy to Sheet					x	x	x	x
Corridor Definition Report					x	x	x	x
Corridor Earthwork Report					x	x	x	x



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
Create 3D PDF					X	X	X	X
Create COGO					X	X	X	X
Create Corridor					X	X	X	X
Create Corridor Surface					X	X	X	X
Create Custom Sheet					X	X	X	X
Create Dynaview					X	X	X	X
Create Dynaview Boundary Collection					X	X	X	X
Create Linestring from Point Cloud					X	X	X	X
Create Plan Set					X	X	X	X
Create Point Cloud (non-Aerial)					X	X	X	X
Create Projected Surface					X	X	X	X
Create Quick Profile					X	X	X	X
Create Radial Surface					X	X	X	X
Create Rectified Image					X	X	X	X
Create Scale Bar					X	X	X	X
Create Shareable Slope Table					X	X	X	X
Create Sheet Set					X	X	X	X
Create Side Slope					X	X	X	X
Create Sub-Template					X	X	X	X
Create Surface From Reference File					X	X	X	X
Create Tunnel Inspection Map					X	X	X	X
Define Depth Plane					X	X	X	X
Delete Dynaview Boundary Collection					X	X	X	X
Double Proportioning					X	X	X	X
Double Proportioning Report					X	X	X	X
Drafting Templates					X	X	X	X
Dynaview Collection					X	X	X	X
Edit Corridor					X	X	X	X
Edit Corridor Template					X	X	X	X
Edit Dynaview Boundary Collection					X	X	X	X
Edit Shareable Slope Table					X	X	X	X
Edit Sheet Set					X	X	X	X
Explode Dynaview Grid					X	X	X	X
Explode Surface					X	X	X	X
Flight Mission Exporter					X	X	X	X
Grid Style Manager					X	X	X	X
Group Photo Stations					X	X	X	X
History Log View					X	X	X	X
Import MXDB Database					X	X	X	X
Insert Corridor Template					X	X	X	X
Legal Description Writer					X	X	X	X
Macros					X	X	X	X
Manage Material Layers					X	X	X	X



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
Manage Template Node Names					x	x	x	x
Manual Camera Calibration					x	x	x	x
Manual (MX7) Camera Calibration					x	x	x	x
Map Check Report					x	x	x	x
Mapillary Panorama Exporter					x	x	x	x
Measure Photo Point					x	x	x	x
Merge Survey Projects					x	x	x	x
MX9 Export to Solv3D					x	x	x	x
New Block Edit View					x	x	x	x
New Photo Point Spreadsheet					x	x	x	x
New Sheet View					x	x	x	x
<b>Optimize Surface Report</b>					<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>
Print Plan Set					x	x	x	x
Process Panoramas					x	x	x	x
Reproject Surface					x	x	x	x
Roughness Index Report					x	x	x	x
<b>Select Point Cloud By Boundary</b>					<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>
<b>Shrink Wrap</b>					<b>x</b>	<b>x</b>	<b>x</b>	<b>x</b>
Single Proportioning					x	x	x	x
Single Proportioning Report					x	x	x	x
Station Offset Elevation Report					x	x	x	x
Superelevation Diagram					x	x	x	x
Superelevation View					x	x	x	x
Terrestrial Bundle Adjustment Report					x	x	x	x
TopoDOT Export - Mobile Mapping Data					x	x	x	x
Transform Survey Points					x	x	x	x
Transform Survey Points Report					x	x	x	x
Trimble MX Cubical Exporter					x	x	x	x
Trimble MX Panorama Exporter					x	x	x	x
Virtual DR					x	x	x	x
XML Horus Exporter					x	x	x	x
Apply Surface Site Improvement						x	x	x
Create Machine Data Overlay						x	x	x
Create Machine Data Surface						x	x	x
Create Points from Spot Elevations						x	x	x
Create Subgrade Surface						x	x	x
Create Uncompacted PCS Surface						x	x	x
Create Vertical Design						x	x	x
Detailed Cell Viewer						x	x	x
Edit Machine Data						x	x	x
Edit Vertical Design						x	x	x
Edit/View Machine Data Overlay						x	x	x



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
Elevate Contour						x	x	x
Elevate Contours by Crossing						x	x	x
Elevate Contours by Label						x	x	x
Elevate Lines						x	x	x
Elevate Pads						x	x	x
Map Layers						x	x	x
Project Cleanup						x	x	x
Variable Offset Line						x	x	x
Add/Remove Members to Station/Offset View							x	x
Analyze Earthwork Balance							x	x
Archive Mass Haul							x	x
Boring Log Report							x	x
Build Takeoff Surfaces							x	x
Categorize Takeoff Layers							x	x
Compute Region Volume							x	x
Configure Subgrade Adjustments							x	x
Convert to Haul Road							x	x
Create Boring Log							x	x
Create Boundary by Site Improvement							x	x
Create Corridor Boring Log							x	x
Create Earthworks Site							x	x
Create Haul Road							x	x
Create Site Mass Haul Analysis							x	x
Create Stored Cross-sections from CAD Drawings							x	x
Custom Takeoff Report							x	x
Customize Digitizer Button Profiles							x	x
Define Areas of Interest							x	x
Define Site Materials							x	x
Define Strata							x	x
Define Topsoil Stripping Areas							x	x
Digitize Contour							x	x
Digitize Cross-section							x	x
Digitize Linestring							x	x
Digitize Pad							x	x
Digitizer Setup							x	x
Earthwork Summary							x	x
Edit Boring Log							x	x
Edit Corridor Boring Log							x	x
Edit Site Mass Haul Analysis							x	x
Export Site Mass Haul Plan VCL File							x	x
Identify Site Regions							x	x
Mass Haul Balance View							x	x



Blue text denotes new or enhanced v5.70 features.

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
Mass Haul Editor							X	X
Material Processing Report							X	X
Name/Label Site Regions							X	X
New Station/Offset View							X	X
Overexcavation							X	X
Refresh Mass Haul Analysis							X	X
Site Mass Haul Report							X	X
Takeoff Report							X	X
Track Cross-Section							X	X
Use Excess Topsoil							X	X
Validate Site Improvement Areas							X	X
Auto-Balance Mass Haul								X
Auto-Balance Mass Haul for All Materials								X
Balance Line Report								X
Balance Mass Haul at Grade Point								X
Check Intersection Geometry								X
Clear Mass Haul Balances								X
Corridor Mass Haul Diagram								X
Corridor Mass Haul Report								X
Create Corridor Mass Haul Analysis								X
Create Cul-de-Sac								X
Create Haul Range								X
Create Intersection								X
Create Mass Haul Barrier								X
Create Mass Haul Export								X
Create Mass Haul Import								X
Edit Zone Naming Settings								X
Export Mass Haul Plan								X
Export TILOS Mass Haul XML File								X
Load Intersection Template								X
Paste Properties								X
Save Intersection Template								X
Select Child Lines								X



# Command Matrix

## Trimble Business Center v5.70 Software

### Modules

Each Trimble® Business Center (TBC) Module is designed to support a group of workflows around a single topic. The modules are add-ons to an edition.

- **Aerial Photogrammetry Module:** Process + create deliverables with Trimble + third-party UAS data in TBC + UASMaster.
- **ANZ Toolbox:** Use a variety of commands that support 12d Model and Australian Asset Design and As Constructed (ADAC) workflows.
- **Drilling Piling Dynamic Compaction Module:** Create drill plans + reports for Trimble DPS900 Machine Control Systems.
- **GIS Module:** Seamlessly integrate GIS data from Trimble Access™ + TerraSync™ software into TBC + connect to external GIS databases.
- **Mobile Mapping Module:** Process, register, + manage MX9 Mobile Mapping data; work with MX hardware calibrations.
- **MM MX9 Laser Correction Module:** Account + adjust for multiple-time around (MTA) laser effects in the MX9 Mobile Mapping hardware.
- **Monitoring Module:** Define movement alarms, visualize displacements in 3D, and create monitoring reports from any survey data.
- **Scanning Module:** Register + colorize SX10 + X7 data; classify regions, extract features, + create deliverables from SX10, X7, + 3rd party point clouds.
- **Tunneling Module:** Create + edit tunnel models for Trimble Access Tunnels + create customized as-built + geometry reports.
- **Utility Modeling Module:** Generate + visualize gravity, pressurized, + other utility runs in parametrical constrained trenches.



Blue text denotes new or enhanced v5.70 features.

Command	Aerial Photogrammetry	ANZ Toolbox	Drilling Piling Dynamic Compaction	GIS	Mobile Mapping	MM MX9 Laser Correction	Monitoring	Scanning	Tunneling	Utility Modeling
Adjust Photo Stations (with GCP's)	x									
Advanced UAS	x									
Create Deliverables	x									
Create Orthomosaic	x									
Create Point Cloud (Aerial)	x									
Create Raster DSM	x									
Flight Mission Adjustment Report	x									
<b>Import UAS Data</b>	<b>x</b>									
Merge Flight Missions	x									
Open UASMaster	x									
Send to UASMaster	x									
senseFly eMotion Exporter	x									
ADAC Exporter		x								
ADAC Settings v4.2 + v5.01		x								
Adjust Polyline with Bowditch		x								
Annotate Objects		x								
Browse for Import File		x								
Convert to CAD Points		x								
Convert to Horizontal Linestring		x								
Convert to Multiline Text		x								
Edit Linestring Elevation		x								
Explode Corridor Mass Haul		x								
Export 12da File (Advanced)		x								
Export ADAC v4.2 + v5.01		x								
Find and Replace Points		x								
Import 12d Color File		x								
Import 12da File (Advanced)		x								
Import ADAC v4.2 + v5.01		x								
Insert Alignment Table		x								
Insert Excel Table		x								
Insert Vertices From Points		x								
Line Node Cleanup		x								
Map Objects		x								
Measure Perpendicular		x								
Measure Surface		x								
Move Line		x								
Pavement Conformance Report (Advanced)		x								
Point Conformance Report		x								
Points From Chainage Offset		x								
Regroup Layers		x								
Remove Duplicates		x								



Blue text denotes new or enhanced v5.70 features.

Command	Aerial Photogrammetry	ANZ Toolbox	Drilling Piling Dynamic Compaction	GIS	Mobile Mapping	MM MX9 Laser Correction	Monitoring	Scanning	Tunneling	Utility Modeling
Rename Layers		x								
Rename Objects		x								
Reverse Lines		x								
Set Sewerage Connection Attributes v4.2 + v5.01		x								
Set Vertex Text		x								
Show Line Direction Options		x								
String Conformance Report		x								
Surface Area Report Tool		x								
<b>TriangulateIFC</b>		x								
Unlink Linestrings		x								
Utilities Autodraft		x								
<b>Utility Conformance Report</b>		x								
<b>Utility Node To BIM Object</b>		x								
Validate ADAC		x								
Add Drill Hole to Drill Plan			x							
Blow Count Report			x							
Change Pile ID			x							
Create Drill Plan			x							
Create Dynamic Compaction Plan			x							
Create Manual Drill Plan			x							
Create New Version			x							
Create Pile			x							
Create Pile Plan			x							
Create Piles at Points			x							
Drill Hole Quality Report			x							
Dynamic Compaction Quality Report			x							
Edit Drill Plan (and Rebuild)			x							
Edit Pile Types			x							
Export DPS900 Drill Plan			x							
Export DPS900 Dynamic Compaction Plan			x							
Export DPS900 Pile Plan			x							
Generate As-Drilled Points			x							
Generate Design Points			x							
IREDES Drillplan Exporter			x							
Manage Pile Types			x							
Piling Quality Report			x							
Rebuild Drill Plan			x							
Rebuild Pile Plan			x							
Select Hole by ID			x							
Add GIS Connection				x						
Export ESRI File Geodatabase				x						





Blue text denotes new or enhanced v5.70 features.

Command	Aerial Photogrammetry	ANZ Toolbox	Drilling Piling Dynamic Compaction	GIS	Mobile Mapping	MM MX9 Laser Correction	Monitoring	Scanning	Tunneling	Utility Modeling
Get GIS Schema				x						
GIS Connection Manager				x						
Import .cor Files				x						
Import ESRI File Geodatabase				x						
Import SSF Files				x						
Map Metadata				x						
Read Features from GIS				x						
Remove GIS Connection				x						
Write Features to GIS				x						
Batch Register Run to Run					x					
Export Mobile Mapping Calibration					x					
Export MX50 to Solv3D					x					
Export MX50 to TMX					x					
Export MX50 to TopoDOT					x					
Generate PFIx					x					
Generate Scans					x					
Import Mobile Mapping Calibration					x					
LAS Export with Timestamp					x					
Mobile Mapping Report					x					
Process RAW Trajectory Data					x					
Register Mobile Mapping Scans					x					
Split Run					x					
Update Scans					x					
MX9 Laser Correction (in Mobile Mapping Generate Scans command)						x				
Assign Monitoring Project							x			
Create Monitoring Points							x			
Monitoring Epochs Manager							x			
Monitoring Points Spreadsheet							x			
Show Monitoring Chart							x			
Show Monitoring Report							x			
Sync Monitoring Project							x			
<b>Alignment Geometry Report</b>								x		
Ambient Shading Display								x		
Create High and Low Point								x		
Create Orthophoto								x		
Create Scan Station								x		
Extract Classified Point Cloud Regions								x		
Extract Cross-sections From Point Cloud								x		
Extract Point Feature								x		
Extract Line Feature								x		



Blue text denotes new or enhanced v5.70 features.

Command	Aerial Photogrammetry	ANZ Toolbox	Drilling Piling Dynamic Compaction	GIS	Mobile Mapping	MM MX9 Laser Correction	Monitoring	Scanning	Tunneling	Utility Modeling
Filter Point Cloud								X		
Georeference Scan								X		
Import FLS Scan Files								X		
Import TZF Scan Files								X		
Intensity Based Filtering								X		
Measure Overhead Line Clearance								X		
Measure Vertical Clearance								X		
No Shading Display								X		
Normal Shading Display								X		
Outline Visibility Mode								X		
Point Cloud Region Classifier (Classify Point Clouds)								X		
Point Cloud Smart Picking								X		
Scan Georeferencing								X		
Scan Inspection								X		
Scan Refinement Report								X		
Scan Registration								X		
See Inside Visibility Mode								X		
Add/Remove As-Built Tunnel Mesh Members									X	
Add Tunnel Shape Template									X	
Assign Tunnel As-Built Points									X	
Assign Tunnel Convergence Points									X	
Copy Tunnel									X	
Create As-Built Tunnel Mesh									X	
Create Designed Tunnel Mesh									X	
Create Tunnel									X	
Create Tunnel Alignment									X	
Create Tunnel Corridor									X	
Create Tunnel Inspection Map									X	
Create Tunnel Inspection Points									X	
Create Tunnel Shape									X	
Create Tunnel Shape From CAD									X	
Create Tunnel Template									X	
Edit Horizontal Tunnel Offset									X	
Edit Set Outs									X	
Edit Tunnel Rotation									X	
Edit Tunnel Shape									X	
Edit Vertical Tunnel Offset									X	
Export SCS900 Tunnel XML File									X	
Export TXL									X	
Extract Classified Tunnel Regions									X	
Import TXL									X	



Blue text denotes new or enhanced v5.70 features.

Command	Aerial Photogrammetry	ANZ Toolbox	Drilling Piling Dynamic Compaction	GIS	Mobile Mapping	MM MX9 Laser Correction	Monitoring	Scanning	Tunneling	Utility Modeling
<b>Rebuild As-Built Tunnel Mesh</b>									x	
Select Tunnel Points									x	
Tunnel As-Built Report (with best-fit circle)									x	
Tunnel ASCII Report									x	
Tunnel Convergence Report									x	
Tunnel Inspection Report									x	
Tunnel Inspection View									x	
<b>Tunnel Set Outs As-Built Report</b>									x	
Tunnel View									x	
Create Pipe										x
Create Trench Surface										x
Create Utility Line										x
Create Utility Network										x
Create Utility Node										x
Create Utility Run										x
Edit Trench Template										x
Edit User-Defined Utility Shape										x
Edit Utility Run										x
Insert Trench Template										x
Insert Utility Node										x
Reverse Utility Run										x
Trench Template Manager										x
Utility Takeoff Report										x

Disclaimer: Trimble reserves the right to change the licensing or make corrections to the program at any time through an update to Trimble Business Center and or a correction to this list.

No guarantees are implied and you should confirm licensing details with your Distribution Partner before purchasing.